





SINGLE HOLE COLUMN SPOUT KITCHEN FAUCET

ROHL Country Kitchen Collection

A1679LP (Porcelain Levers without Handspray) A1679LM (Metal Levers without Handspray) A1679LPWS (Porcelain Levers with Handspray) A1679LMWS (Metal Levers with Handspray)

FE	AT	UR	ES	
		• •••		


- 1/4-turn ceramic valves
- 11 29/64" column spout height
- 9" spout reach
- 1 3/8" cutout
- 1/2" NPT flexible supplies
- 4" extension kit C7555EXT

FINISHES

- Polished Chrome
- Polished Nickel
- Satin Nickel
- Tuscan Brass
- Inca Brass


WARRANTY

- Limited Lifetime*
- * No Warranty on Tuscan Brass Finish (TCB)

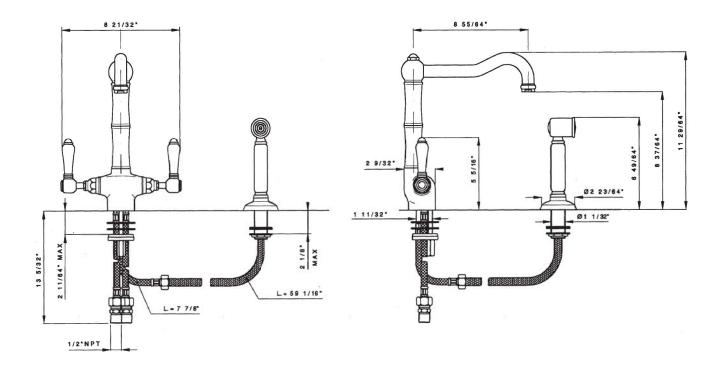




A1679 Spare Parts

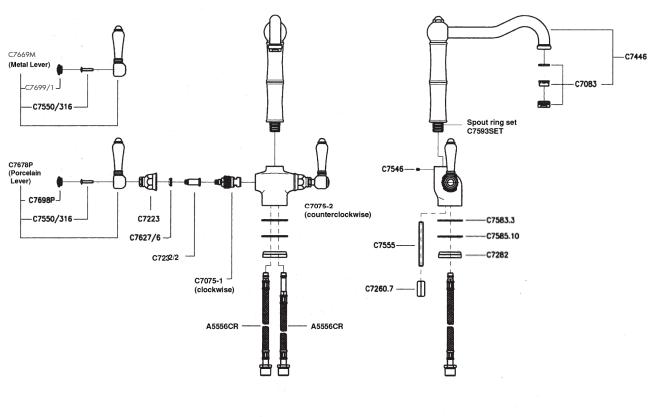

(*) NOT AVAILABLE AS SPARE PART



A1679WS Spare Parts

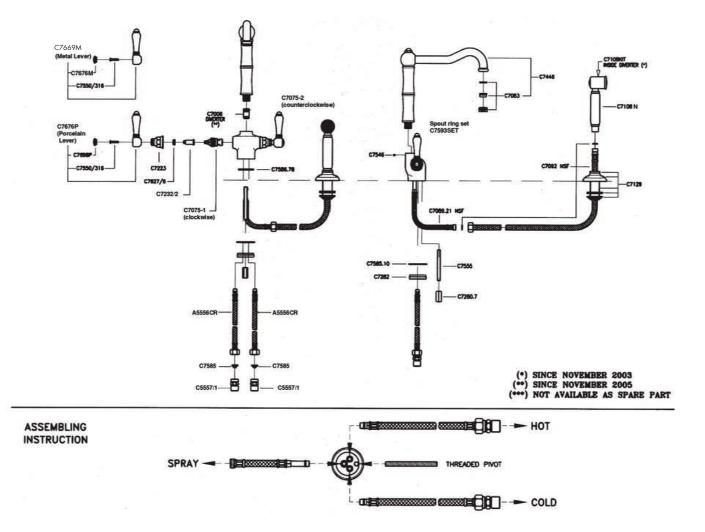



ATTENTION

READ THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL FAUCETS AND WALL VALVES

INSTALLATION and WARRANTY INSTRUCTIONS TECHNICAL INFORMATION

All flexible hoses are designed and manufactured for use with water in exposed locations only. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

- All connections with threads M10x1 male must be hand tighten. Do not over tighten. Over tightening may cause damage to the hose.

All faucets washers and o-rings are designed and manufactured for use with water. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

Faucets are designed for use with the tempratures and pressures listed below:

- minimum cold water supply 50 °F
- maximum hot water supply 145 °F
- minimum pressure 15 psi
- maximum pressure 75 psi
- maximum fixing torque value = 10 lbf.ft.

Please note: The recommended best pressure for best performance is between 40 psi and 60 psi. More pressure than 60 psi or less pressure than 40 psi may affect the diverting action in side spray faucets.

- Do not use any Rohl Country/ Nicolazzi faucet with sulphorous water.
- The minimum temperature for all faucets is 50 degrees F. Below 50 degrees F will void the warranty.
- When available, filter systems must be placed between hot and cold supply lines and the faucet. Improper use or non-use of filters may make diverting faucets with hand sprays perform poorly.
- Don't modify faucet and their components
- Use only original spare parts if there are replacements to be ordered.
- □ Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty.
- Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any faucet or wall valve that do not conform to these technical instructions will void the warranty.




Installation Instructions

INSTALLATION FOR SINGLE HOLE/TWO LEVER FAUCETS

with two lever or cross handle design (MODELS INCLUDE: A1467, A1466, A1470, A1469 or A1680,A1679, A1667, A1676)

Model A1676 shown

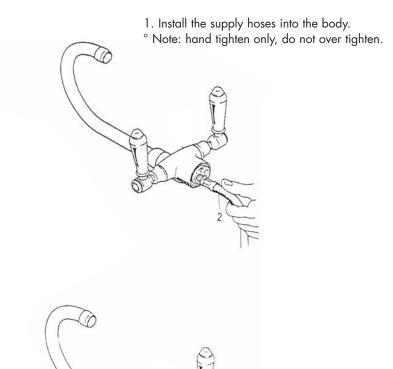


Consult your local ROHL showroom for additional information and specifications. For complete warranty details and a list of showrooms, go to www.rohlhome.com.

2



INSTALLATION

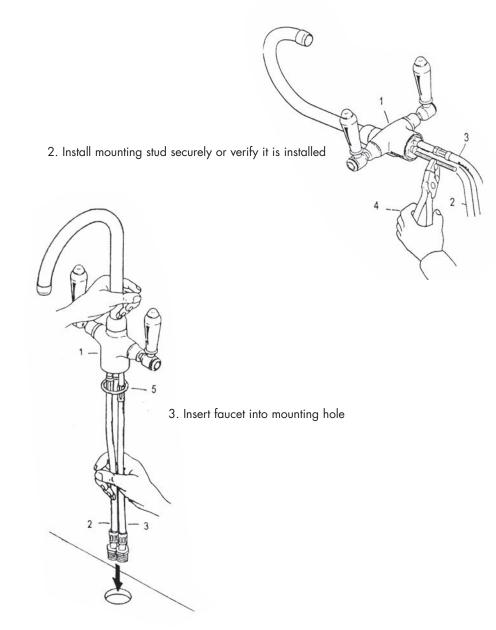



Authentic Luxury for Kitchen and Bath™

Installation Instructions

INSTALLATION

4. Under the sink, stack the half ring rubber gasket - 6, the half ring mounting plate - 7, then the mounting nut - 8 onto the stud.

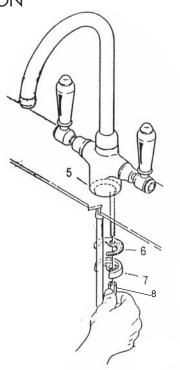

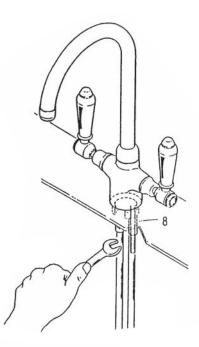

5. Check the position on the sink of the faucet, then tighten the nut with a 13mm wrench.

[°] Note: the under deck mounting surface must be flat. If irregular, the nut may not be secured, and the faucet will be loose on the sink.

6. Connect the supply lines to the hot and cold supplies.

7. Turn on the water for the hot and cold.

Check for leaks.




Installation Instructions

MAINTENANCE FOR SINGLE HOLE/TWO LEVER FAUCETS with two lever or cross handle design

HOW TO CHANGE THE HOT OR COLD CARTRIDGE

(MODELS INCLUDE: A1467, A1466, A1470, A1469 or A1680,A1679, A1667, A1676) (model A1469 and A1676 shown)

1. Turn off the hot and cold supply lines to the faucet. (Not shown)

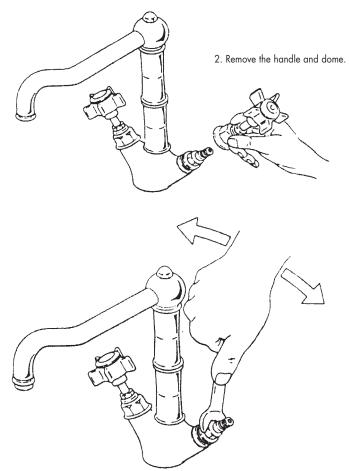



3. Remove the cartridge with a smooth jawed wrench or 17mm wrench





MAINTENANCE

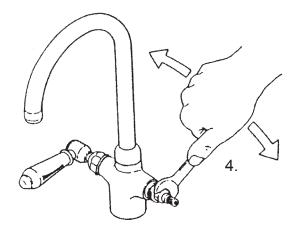


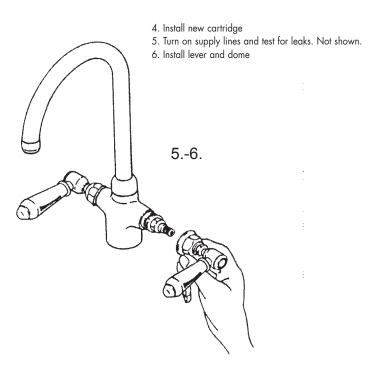



Installation Instructions


INSTALLATION OF SINGLE HOLE FAUCET WITH SIDESPRAY MODELS INCLUDE: DUAL LEVER MODELS: A1679WS, A1676WS SINGLE TOP LEVER MODELS: A3606WS, A3608, A3479 SINGLE LEVER SIDE LEVER MODELS: A3650WS

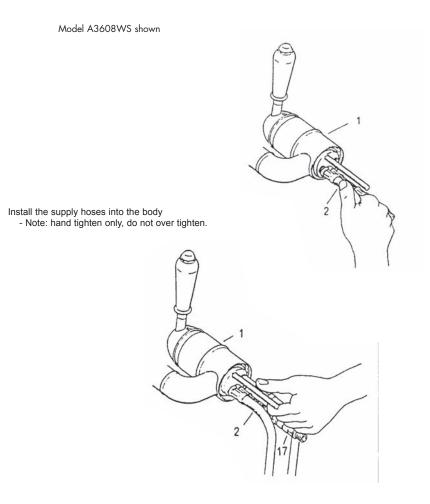

Install mounting stud securely or verify it is installed.




Insert faucet into mounting hole.

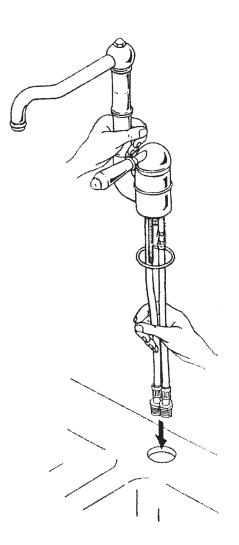




Installation Instructions

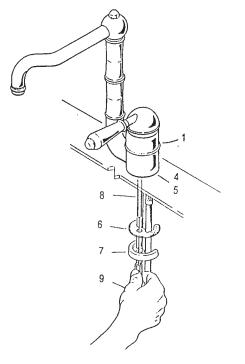

Under the sink, stack the half ring rubber gasket - 6, the half ring mouting plate - 7, then the mounting nut -9 onto the stud.



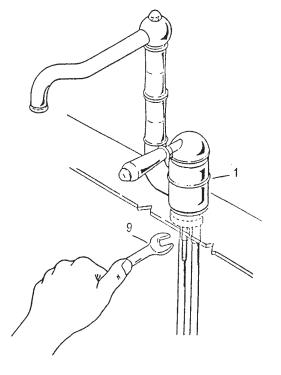

Check the position on the sink of the faucet, then tighten the nut with a 13mm wrench.


Note: the under deck mounting surface must be flat. If the mounting surface is irregular, the nut may not be secured, and the faucet will be loose on the sink.




Insert the hand spray escutcheon into the sink hole

<u>Please note</u>: make sure the hand spray hole is a minimum of 4 3/4" away from the main body of the faucet.

• Install the rubber washer -13, the flat metal washer -14, then the nut -15. Secure on the deck, but do not over tighten.

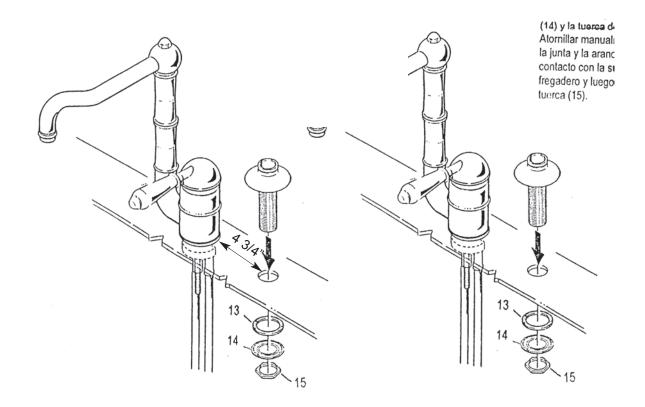



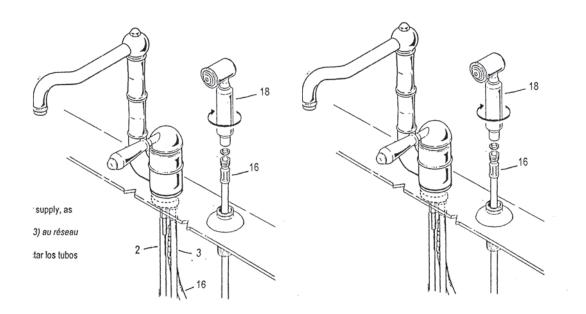

- Install the black hand spray hose to the supply from the faucet under the sink.
 Guide the 9mm male end up through the escutcheon.
 - Install the hand spray with the required flat washer with screen on top of the sink.

Connect the supply lines to the hot and cold supplies securely.
 Please note: make sure the rubber washers with the screens are used. These screens will prevent debris from entering the diverter.

•Turn on the water for the hot and cold.

· Check the diverting action by operating the hand shower.

 
<u>Please note:</u> If there is a 99% divert or small trickle of water out the spout when using the hand spray that is acceptable. Due to water conditions, a 100% diverting action is not always possible.

· Check for leaks.



- A- INSTRUCTIONS FOR SERVICING THE C7108N HAND SPRAY
- B- Please note: If the hand spray is dripping constantly when using the faucet, the hand spray can be serviced by either stretching the spring or replacing the cartridge. A small drip after use that stops is sometimes normal, as there is a small space between the black aerator and the stop mechanism that holds a ½ teaspoon of water. A drip or two after use is normal.
- C- To stretch the spring:
 - a. Unscrew ring c7108/7
 - b. Remove c7108/8 black faceplate- Push the button or remove with tool
 - c. Stretch the spring c7597 slightly
 - d. Reassemble and test
- D- To change the cartridge in the hand spray c7108kit
 - a. Unscrew the spray head-2
 - b. Unscrew the faceplate ring
 - Push the button in to eject the cartridge from the head.
 - d. Remove the decorative button from the old assembly
 - e. Put on the new assembly
 - f. Insert in the metal head g. Install the spring, aerator
 - and ring
 - h. Install back on the handle
 - i. Test the unit for leaks





(E)








- E- Clean or replace the back flow preventer c7076
 - a. Disconnect the flexible
 - hose from the spray head b. Remove the spray head
 - from the handle-2
 - c. Remove the nylon insert-3+4
 - d. Remove the back flow preventer- not shown i. Refer to exploded
 - drawing e. Replace or clean the
 - check valve f. Insert new or serviced
 - check valve back into the handle
 - i. Note: make sure the flow restrictor is not
 - backwards
 - g. Reverse steps and test.









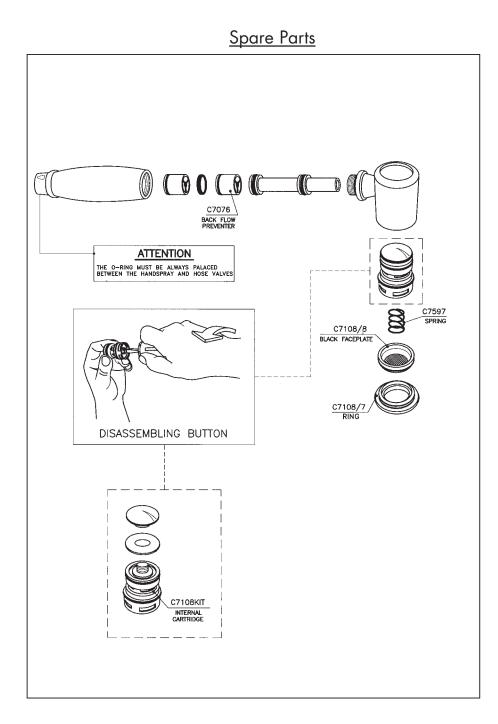



LOW FLOW OR NO FLOW TROUBLESHOOTING INSTRUCTIONS

(ALL MODELS: A3608 shown)


Current kitchen faucets have a flow rate of 1.5 GPM from the aerator and the hand spray.

If you are experiencing low flow from the spout: Do not change the cartridge

- Unscrew and clean the aerator 1
- Unscrew and clean the filters inside the supply connections. 3
- Check the supply lines for kinks or obstructions. 3
- Make sure the supply line stops are fully on. Not shown

If you faucet has a hand spray, and your hand spray has obstructed flow or no flow:

- Check the hand spray hose for kinks.5
- Unscrew and clean the hand spray filter.4
- Clean the aerator in the hand spray. 2

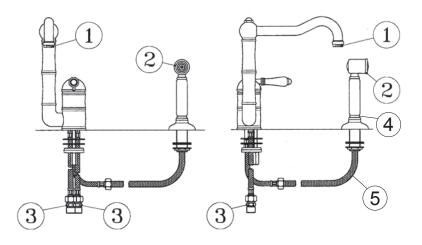



Care a	and u	se fo	r fin	ishes
--------	-------	-------	-------	-------

Country Bath Products are all authentic finishes that have not been coated with any product.

After each use, pat the fixture down to remove any excess water. This will prevent any water spotting or mineral build-up. Use only soft liquid soap and water to clean the surface. Use a soft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, 409 or Fantastik. These products can damage the finish leaving black or white spots. Never use an abrasive product like Softscrub, Comet, Ajax or Bon Ami.

For deep polishing we recommend Bruno's Wax for all finishings.

Tuscan Brass is a living finish and has no warranty. It will lighten with use. To extend the life of the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or buff this finish.

WARNING: the use of cleaning products not recommended might irreparably harm the surfaces of the faucets which in such case are not covered by our warranty.

Limescale

The faucet is fitted with an aeration device in the Hot/Cold water outlet.

This may need occasional cleaning especially in hard water areas.

This is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and leaving the inner screen mesh immersed over night in vinegar or lemon juice. Do not use chemical descaling liquids for this purpose.