
IMPORTANT INFORMATION

CAUTION: Risk of property damage. Select the type of fasteners based on wall material. Fasteners must have a minimum of 35 lb (15.88 kg) load bearing. Install fasteners (not provided) through the mounting cleat and into a stud to avoid possible property and product damage. If this is not possible, wall anchors (not provided) must be inserted before installing the fasteners.

Follow all local plumbing and building codes.

- **2A.** Place the mirror in the desired location, making sure it is level. Mark the location.
- **3A.** Mark the top of the mirror frame.
- **3B.** Mark the mirror centerline.
- **4A.** Measure the distance from the top of the mirror to the bottom of the cleat on the mirror.
- **4B.** Measure the distance from the top of the mirror, and mark the location on the wall.
- **5A.** Mark the location of the holes on the wall. Verify the marked holes are level.

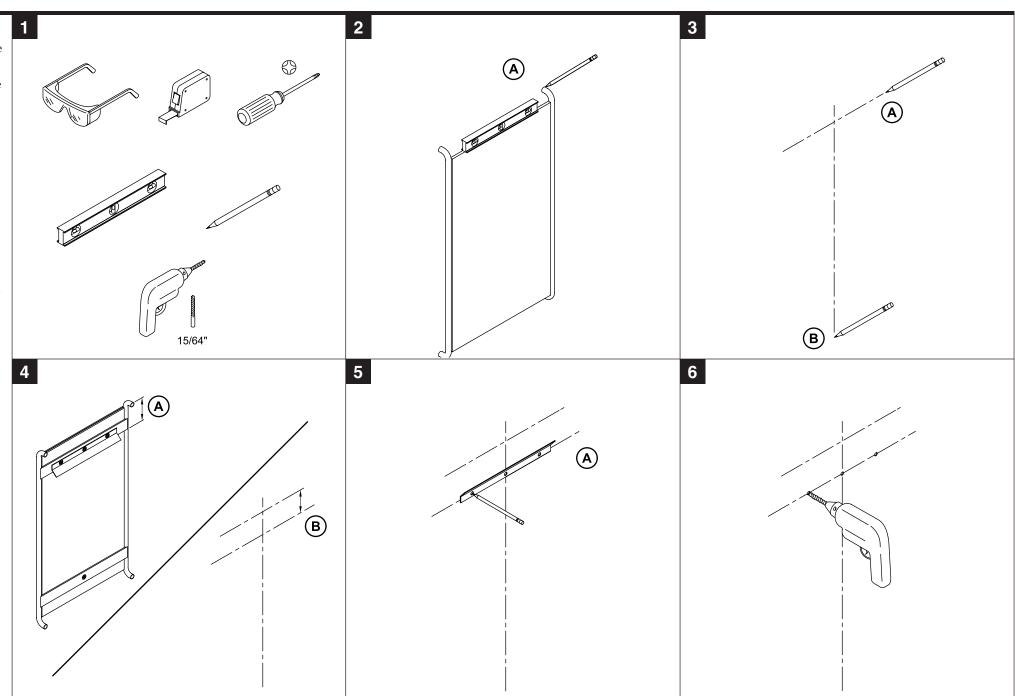

1435424-2-**A** 2020 KALLISTA

9A. Remove any visible marks from the wall.

Questions? Problems? For additional assistance, please contact KALLISTA's Customer Service Department at 1-888-4-KALLISTA (1-888-452-5547) or kallista.com.

